LANDMARK STRUCTURES

MO SKEETERS BAIT & TACKLE PF5194

This rustic bait and tackle shop features a weathered metal roof and narrow clapboard siding. Details include signage, live bait tank, fishnet, barrel of cane poles, fisherman figure, a porch full of stuff and more!



MODELING AND CARE INFORMATION

This kit suggests the use of materials that may stain or cause damage. Take care to cover project area and clothing appropriately. Follow recommendations for use and cleanup.

CAUTION

Cutting tools recommended. Use with care.



SKEETERS

EAR

FISHIN



We make every effort to ensure our kits are manufactured complete. However, if this kit is missing a part, please make note of the kit name, number and missing part and contact the Woodland Scenics Sales and Customer Service Department at PO Box 98, Linn Creek, MO 65052, 573-346-5555 or sales@woodlandscenics.com.


LANDMARK STRUCTURES


MO SKEETER'S BAIT & TACKLE

SCALE

KIT

BUILDING

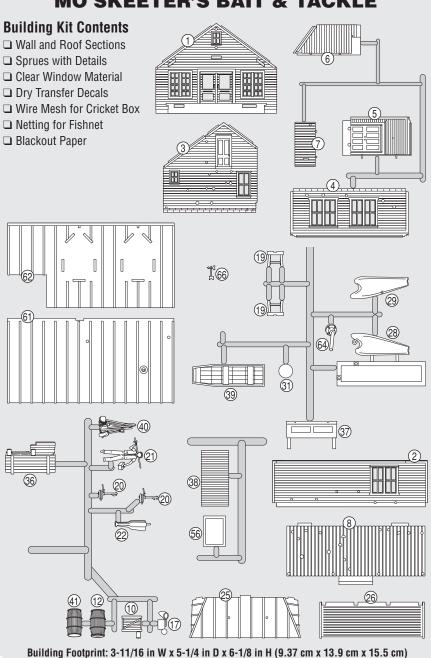

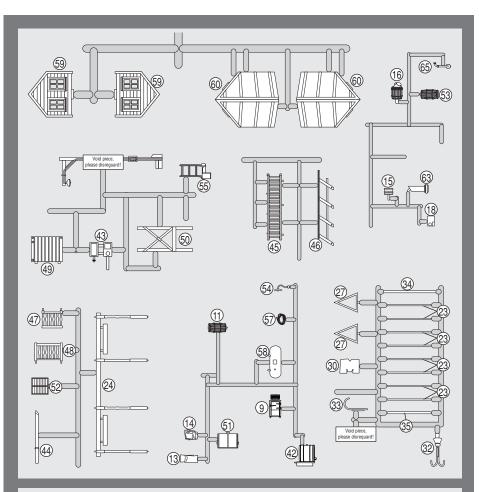

Before You Begin

- Read through instructions.
- Collect additional supplies. •

- Check kit contents and verify Details.
- Cover project area with newspaper.

TIP! To assist in assembly, refer to exploded-view illustration on back of box.

Additional Needed Supplies

- Solvent-based Plastic Cement*
- □ Paints (acrylic and/or enamel)*
- □ Primer*
- Painting Tools
- Cyanoacrylate Adhesive (CA glue/super glue)
- Hobby Knife/Flush Cutting Shears

- □ Fine-Grade Sandpaper
- □ Tweezers
- Ruler
- Scissors
- Burnisher
- □ Newspaper

NOTE: Allow glue to set before moving to the next step. Plastic cement works by dissolving the surface of plastic and welding parts together. Avoid contact with detail on parts.

*Contact your local hobby shop for recommendations.

1. Building and Detail Preparation

- Remove mold flash from Wall and Roof Sections and Details using a hobby knife and sandpaper (Fig. 1a). Make sure grooves in Wall and Roof Sections are free of mold debris. Do not remove Details from sprues at this time.
- Wash Wall and Roof Sections and Details in warm, soapy water using a mild detergent. Rinse and let dry.
- Details can be left on sprues (recommended) or removed for priming and painting. Remove using a hobby knife (or flush cutting shears) and sand off parting lines (Fig. 1b). Details may be easier to paint on sprue. It also makes identifying them easier during assembly.
- Be careful to not remove placement posts or installation tabs (Fig. 1c).

2. Prime and Paint

Do not prime or paint placement posts. Some Details may be easier to paint once assembled. Apply a thin coat of primer and let dry.

 Paint as desired and let dry. See Tips & Techniques on pg. 6 for painting tips and weathering techniques.

TIP! To make priming and painting loose Details easier, secure them to strips of masking tape (sticky side up) attached to a piece of cardboard (**Fig. 2a and 2b**).

3. Install Window Material

- Cut Clear Window Material to size. Align over corresponding windows on inside of Building. Dab a small amount of glue carefully around edges (Fig. 3a).
- Repeat for each set of window openings, including Dormers x2 (59) (Fig. 3b).

4. Apply Dry Transfer Decals


Dry Transfer Decals are included for Store Sign (28), Live Bait Crate (10), Icebox (29), Shad Barrel (11), Cane Pole Barrel (12), M (20), O (31), Minnow Bin (36), Cricket Box (37), Jon Boat (39), Dumpster (51), Side Wall Sign (56), and Propane Tank (58). Before applying Decals to Details, test fit to confirm proper placement.

- Cut out desired Decal. Avoid handling the back and position in desired location. Rub over entire Decal with a burnisher or dull pencil.
- Lift away carrier sheet carefully. If Decal did not transfer completely, let carrier sheet fall back in place and burnish again.
- Place backing paper over Decal and burnish again for maximum adhesion.
- When applying onto textured surface, press Decal into texture with a pencil eraser.

5. Assemble Walls

Verify position of Walls before gluing in place. Be sure Walls are glued square and level, and seams are tight.










Fig. 2a



5. Assemble Walls cont.

- Glue Right Wall (2) to Front Wall (1). Glue Left Wall (4) to Front Wall. Then, glue Back Wall (3) to Right Wall (2) (Fig. 5a).
- Glue Dock (7) to Dock Door Wall (5), then attach Dock Side Wall (6) (Fig. 5b).
- Glue Dock Assembly to Walls ③ and ④ (Fig. 5b).

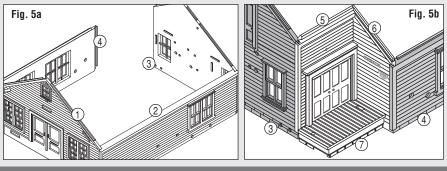



IMPORTANT: Assemble and install Details using Cyanoacrylate Adhesive (CA glue / super glue). If Details were left on sprue while painting, remove using a hobby knife (or flush cutting shears). Test fit Details before gluing. When possible, insert placement post into hole and apply CA glue from underneath structure, or use a toothpick to apply a tiny amount of glue not post and then insert into hole


glue onto post and then insert into hole.

6. Front Porch

- On the Porch (8), not all placement holes are used and three are guides for Live Bait Crate (1) (Fig. 6a).
- Attach Icebox (9), Live Bait Crate (10) (position over three holes next to ice box), Shad Barrel (11), Pile of Sacks (14), Two Sacks (13), Small Crate (15), Sawhorses x2 (19) with Boat Motors x2 (20), Tackle Box, Pail, Net (17), Pickle Barrel (16), Cooler (18), and Man (21) (Fig. 6b).
- Glue Porch Posts @ and then Oars @ (Fig. 6c).
- Attach Cane Pole Barrel 12, then glue Cane Poles x8 (23) into Barrel (Fig. 6d).
- Glue Porch Awning Underside (26) to Porch Awning (25) (Fig. 6e).

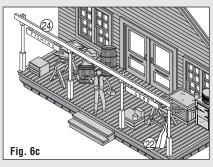

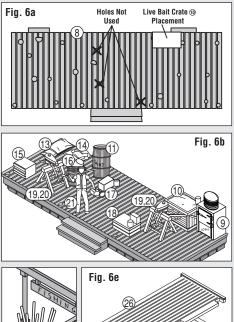





4


6. Front Porch and Details cont.

- Glue Porch Awning Assembly to Porch Posts. Then, align tabs with notches in Front Wall and glue in place (Fig. 6f).
- Glue Back of Fish Lure Sign (2) to Sign (2), then add Hook (32) and Extra Hook (33). Add the M (30) and O (31) (Fig. 6g). Glue Brackets x2 (27) to back of Sign (Fig. 6h).
- Glue Short Support Pole (3) into top hole on backside of Fish Lure and Long Support Pole (3) into notch on backside of Sign (Fig. 6h).
- Test fit Fish Lure Sign Assembly on building and trim Support Poles, if necessary. When satisfied with fit, glue in place.







7. Add Remaining Details

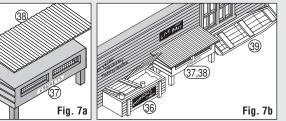


Right Side: Glue Wire Mesh behind opening in Cricket Box ③, then attach Lid ③ (**Fig. 7a**). Install Minnow Bin ④, Cricket Box Assembly, and on Boat ③ (**Fig. 7b**).

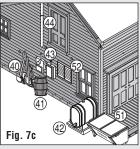

Back (Fig.7c): Stack of Tools (40), Barrel (41), Kerosene Tank (42), Dumpster (51), Electric Meter (43), Electric Meter Conduit (44), Vent (52)

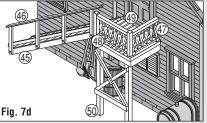


Back Staircase (Fig.7d): Glue Stair Support (5), Short Banister (47), and Long Banister (48) to the Landing (49). Glue Landing Assembly to Back Wall. Attach Stairs (45) and Railing (46).




Left Side (Fig.7e): Barrel 53, Light 54, Hand Dolly 55, Sign 56, Hose 57, Propane Tank 58



 Glue Dormer Windows x2 (59) to Roof (62) (Fig. 8a), then attach Dormer Roofs x2 (60) (Fig. 8b).





8. Roof cont.

- Insert the lip on the upper edge of Roof (f) into groove on Roof (2) and glue in place (Fig. 8c). Glue to building while damp so adjustments can be made.
- Attach Chimney 63, Vent 64, Electric Meter Conduit Vent 65 and Weather Vane 66 (Fig. 8c).

Fig. 8c

9. Finishing Touch


• Use white glue to attach Fishnet (Netting) along the right side of the Bait & Tackle Shop (Fig. 9a).



10. Blackout Paper

Give the structure the illusion of being occupied.

- Cut two strips of Blackout Paper, each measuring 6-1/16" L x 1-1/4" W. Place the two strips on top of each other and cut a notch halfway up (Fig. 10a).
- Assemble and insert into building diagonally (Fig. 10b).

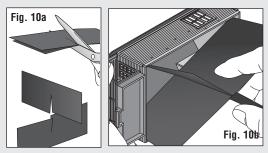

Tips and Techniques

Colors are your choice, but we recommend natural, earth-tone colors. Paint door and window trim the same color as the walls or a contrasting color.

Lighting

To reduce glare when lighting (light kit not included), paint interior walls and underside of roof a flat, earth-tone shade.

Painting Tips

Airbrush or Hand-brush Use enamel (solvent-based) or acrylic (water-soluble) flat finish paint. Aerosol Use flat finish spray paint.

Weathering Techniques

Weathering Wash Add a realistic weathered look (formula follows). Lay building flat so wash spreads evenly. Using a paintbrush, dab on small amounts of Weathering Wash until desired look is achieved. Sponge off excess.

Formula: Mix 1-part acrylic paint (color suggestion: earth-tone shade), 12-parts rubbing alcohol, 8-parts water and 1 drop liquid dish soap.

Airbrush Spray thinned flat black paint lightly onto select areas (color suggestion: grimy black). Add more where discoloration occurs naturally (near windows, roof details, etc.).

Chalk Rub a dark color of pastel chalk on sandpaper to create chalk dust (color suggestion: gray, black, brown, etc.). Using a paintbrush, dab chalk dust where discoloration can occur.

Decals Age Decals by scoring and chipping with a hobby knife.

Look for These Other HO Scale Landmark **Structures Building Kits at Your Local Hobby Shop**



Fresh Market PF5180



Main Street Mercantile PF5182



Planters Feed and Seed Supply PF5181



Sonny's Super Service PF5183



O'Leary Dairy Distribution PF5185



Country Cottage PF5186



Woodland Station PF5187



Sicken Tire Company PF5184

Rustic Barn

PF5190



D's Diner

PF5188

Country Church PF5191



Deuce's Bike Shop PF5193



PF5189



PF5192

