

DOCTOR'S OFFICE AND SHOE REPAIR - D224



Add color, interest and authenticity to any layout with finely crafted HO scale vintage details. Scenic Details® are lead-free metal castings, easy to assemble and fun to paint.

Step-by-step instructions are included in each kit. To assemble, use super glue or fast-setting epoxy. To paint, use Mini-Scene® Paint Set (M125).

Other HO scale scene reproductions include Trainside Scenes™, Complete Scenes™ and Mini-Scene®.

For more information and to learn more tips and techniques, read *The Scenery Manual (C1207)* or visit woodlandscenics.com.

GENERAL INSTRUCTIONS

Clean and Fit Castings - Castings have parting lines, flash and stems that should be removed. Scrape off with a hobby knife, file or sand. If Castings do not align properly, fit them by removing metal with a hobby knife or file. Castings are somewhat brittle and should be handled carefully. If Castings are bent or warped, straighten by placing on a flat surface and pushing down high areas. Prior to gluing and painting, wash Castings in warm, soapy water, rinse and let dry.

Glue Castings - Glue Castings with cyanoacrylate adhesive (CA glue / super glue) or a fast-setting epoxy.


Prime and Paint Castings - Prime all Castings and let dry. If primer beads on Casting, touch paintbrush to a bar of wet soap and then dip in paint. This will help break surface tension of paint, allowing it to adhere to the casting. We recommend painting Castings with the Mini-Scene® Paint Set (M125). It includes detailed instructions on painting and weathering. High-quality, flat hobby paints will also work. Plan ahead. It is often easier to pre-paint Castings. Scrape paint from glue points prior to assembly.

INSTRUCTIONS

Before beginning, read through the General Instructions and Window and Decal Instructions.


Shoe Repair

1. Clean and fit Castings.
2. Prime and paint as desired. Let dry completely. Install Window Material and Decals.
3. Make a left and right wall from Basswood sheet. Measure length of Parts 1 x2 (Rock Walls) and cut two pieces of Basswood the same length. Have clapboard pattern run horizontal. Cut with a hobby knife by making several light cuts along the edge of a ruler.
4. Measure Basswood Walls height by counting 17 full boards (approximately 1 1/16"). Cut to this height and glue to Parts 1 with lap pattern facing down.
5. Glue Parts 2 and 3 to Basswood Wall Assemblies. Wood should slip behind trim on Parts 2 and 3.
6. Assemble and glue Parts 4-8 in numerical order.
7. Measure and cut a piece of Cardstock to rest on lip between Parts 4 and 5 for Roof. Glue in place.

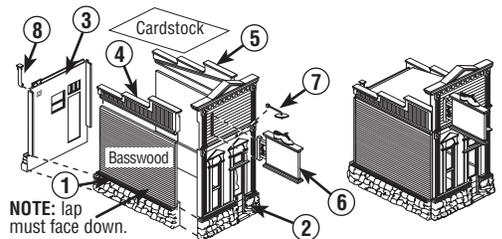

Doctor's Office

1. Clean and fit Castings.
2. Prime and paint as desired. Let dry completely. Install Window Material and Decals.
3. Measure length of Parts 1 and 2 from inside of notch and cut two pieces of Basswood.
4. Measure Basswood height by counting 21 full boards (approximately 1 3/8"). Cut to this height and glue to Parts 1 and 2 with lap pattern facing down.
5. Glue Parts 3 and 4 to Basswood Wall Assemblies. Wood should slip behind trim on Parts 3 and 4.
6. Measure and cut a piece of Cardstock to rest on lip between Parts 1 and 2 for Roof. Glue in place.
7. Glue Parts 5 x2 and 6 in place.

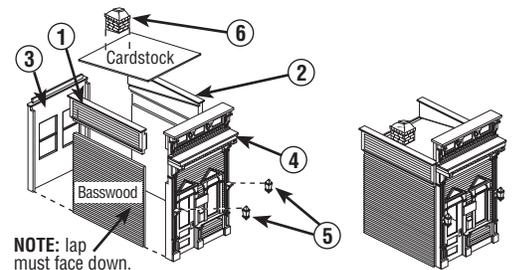

CAUTION: Tools recommended.
Use with care.

This item is not a Children's Product and is not intended for use by Children.

MODELING AND CARE INFORMATION: This kit suggests the use of materials that may stain or cause damage. Take care to cover project area and clothing appropriately. Follow recommendations for use and clean up.

Made in USA F3 ©1990 O CO

WOODLAND SCENICS® PO BOX 98, LINN CREEK, MO 65052 • woodlandscenics.com

Window and Decal Application Instructions



INSTRUCTIONS

Read through all instructions before beginning. Sections of these instructions are not applicable to all kits.

WINDOW MATERIAL

Cut Window Material to fit over windows on inside of building. Window installation is easier when material is installed over sections of windows at one time. Cut Window Material slightly larger than opening to make installation easier. **NOTE:** Some window frames are recessed and require window material be cut to exact size.

WINDOW DECALS

Apply Decals before installing Window Material. Place Window Material behind window opening and mark outline by scoring lightly. Clean Window Material with alcohol. Position Decal in desired location and transfer as instructed (see Decal Application).

DECAL APPLICATION

Keep Decal Sheet clean and free of dust. Apply to clean, dry and dust free surfaces. Cut out desired decal. To transfer, hold carrier sheet securely and rub with Burnisher (DT600) or a dull pencil. Work from one side of the Decal to the other. The image will appear to fade as it transfers. For maximum adhesion, place the backing paper over decal and burnish again. See photo on front of instruction sheet for suggested placement of Decals.

INSTALL WINDOWS

Window Material should be installed after all painting is completed. We recommend gluing windows with white glue or super glue. Apply glue around edges of Window Material. Be careful to not get glue on visible areas. If using super glue, apply a tiny amount around edges of window material only, as clouding can occur.

APPLICATION TIPS

Plan ahead. It is sometimes easier to apply Decals prior to assembly. When applying to a textured surface, rub Decal gently with a fingertip or soft eraser to press into the recesses of the texture.