

# ROOMETTES

## THE PAINT PROS #01-102-01 AND COMBO R4369

### INSTRUCTIONS

1. REMOVE THE MAIN FLOOR, AS WELL AS THE SERVICE COUNTER TOP AND BASE, FROM THE CARDBOARD SHEETS WITH A SHARP HOBBY KNIFE. **DO NOT CUT THE DOTTED LINES!** THEY ARE FOR FOLDING.
2. CAREFULLY FOLD THE BASE OF THE SERVICE COUNTER TO CREATE A THREE-SIDED BOX WITH 90-DEGREE TABS INSIDE AT THE TOP. **DO NOT OVERBEND THEM!**
3. PLACE THE COUNTER TOP UPSIDE DOWN AND GLUE THE TABS OF THE BASE TO IT. PLACE A FILLET OF ADDITIONAL GLUE IN THE INSIDE CORNERS. SET IT ASIDE TO DRY.
4. CREATE WINDOW SHELVES BY ROLLING THE TABS AT THE FRONT OF THE ROOM TO MAKE A BOX. GLUE OTHER SIDE AS SHOWN ON TABS. A SMALL FILE OR SCREWDRIVER CAN BE USED TO APPLY PRESSURE TO THE JOINT FROM INSIDE THE BOX AS IT SETS.
5. FOLD THE WALLS OF THE ROOM TO GET A SENSE OF WHERE THE COUNTER WILL SIT IN THE SPACE. USE YOUR KNIFE TO ROUGHEN THE SURFACE OF THE FLOOR BEHIND THE COUNTER FOR IMPROVED ADHESION. GLUE THE COUNTER IN PLACE, BEING GENEROUS WITH ADHESIVE BEHIND IT. YOU DO NOT WANT IT TO COME LOOSE LATER!
6. FOLD THE ROOM TOGETHER AND GLUE THE LEFT AND RIGHT WINGS UNDER THE FLOOR. USE A POPSICLE STICK OR SIMILAR TOOL TO CAREFULLY APPLY PRESSURE ON THE FLOOR OVER EACH WING TO SET THE GLUE.
7. FLIP THE ROOM OVER AND GLUE THE LEFT AND RIGHT WINGS OVER THE TOP OF THE CEILING.
8. CAREFULLY BEND UP THE TAB LABELLED "GLUE TO WALL" AT A RIGHT ANGLE.
9. GLUE THE SIGNS SECURELY ON THE WINDOW SHELVES, POSITIONED AS DESIRED.
10. ASSEMBLE THE SECOND-FLOOR ROOMS IN A SIMILAR MANNER.
11. CHECK ALL GLUE JOINTS TO MAKE SURE THEY ARE SOLID BEFORE PROCEEDING. TEST FIT THE ROOMS. IF YOU HAVE ASSEMBLED YOUR BUILDING ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS THEY SHOULD FIT EASILY. IF YOU FIND THEY FIT TOO TIGHT VERTICALLY YOU CAN REMOVE SOME OF THE WALL-MOUNT TAB MATERIAL WITH SCISSORS FOR ADDITIONAL CLEARANCE. TO PREVENT LIGHT LEAKAGE, SPREAD A BIT OF GLUE INTO THE PERFORATED SEAMS ON THE CORNERS OF THE ROOM FROM THE OUTSIDE. THIS WILL ALSO MAKE THE JOINTS STRONGER.
12. USE YOUR KNIFE TO REMOVE THE CEILING PLUGS AND INSTALL PROVIDED LEDS, FASTENING THEM IN PLACE WITH GOOD QUALITY TAPE OR GLUE.
13. STARTING WITH THE UPPER FLOORS GLUE THE ROOMS TO THE WALL, BEING CAREFUL NOT TO GET GLUE ON YOUR CLEAR WINDOW MATERIAL.
14. GLUE THE SIGN OVER THE DOORWAY ON THE FRONT OF THE BUILDING.
15. PLUG THE LED HARNESS INTO YOUR WOODLAND SCENICS® JUST PLUG® OR NCE ILLUMINATOR MODULE. SIT BACK AND ENJOY YOUR EFFORTS!

THIS IS NOT A TOY.  
NOT SUITABLE FOR CHILDREN  
UNDER 14 YEARS OF AGE.

# DPM® LANDMARK STRUCTURES® HO SCALE BUILDING KIT



## ROBERT'S DRY GOODS #10200

### INSTRUCTIONS

Follow the enclosed HO scale General Instructions for #100 and #200 series kits. The General Instructions will refer to the drawings and instructions included with this kit. Read through all instructions before beginning construction on your kit.

**Chimneys:** Sand bottom edge of Chimney Backs x4 (102-6) flat. Sand smooth side of Chimney Backs and molded-in Chimney fronts so they fit flush together. Glue together and let dry. When dry, sand top of Chimneys flat.

**Entry Door:** Remove "tabs" from top and bottom of Entry Door (102-7) and Side Panels x2 (102-8) (**Fig. 1**). Score along the indentations with a hobby knife and snap to remove. Be careful to not damage the door frames.

The Side Panels have a shallow angle along one edge and a deeper angle on the other edge. Glue shallow-angled edges to the Door. While glue is flexible, test fit Door Assembly in door opening on Front Wall (102-1). When satisfied with fit, glue in place.


### ANWEISUNGEN

Folgen Sie zusätzlich zu dieser Anweisungen ebenfalls beigefügte allgemeine Anweisungen für Bausätze der Serien #100 sowie #200 in der Baugröße HO. Diese allgemeine Anweisungen bezieht sich auch auf die Skizzen sowie auf die Anweisungen, die diesem Bausatz beigefügt sind. Lesen Sie vor Aufnahme des Zusammenbaus die Anweisungen gut durch.

**Schornsteine:** Glätten Sie mit Schmiergelpapier die Unterseite der Schornsteinrückwände x4 (102-6) ab. Glätten Sie ebenfalls die ebenen (glatten) Seitenteile der Schornsteinrückwände sowie der eingegossenen Schornsteinvorderseiten ab damit sie bündig zusammenpassen. Zusammenkleben und Abbinden lassen. Nach dem Abbinden glätten Sie die Oberkante der Schornsteine ab.

**Eingangstür:** Die angegossenen Laschen an der Tür (102-7) oben sowie unten, sowie an den Seitenpaneelen x2 (102-8) (**Fig. 1**) so entfernen: Mit dem Bastelmesser an den Rillen entlangfahren und abbrechen. Achten Sie dabei darauf, dass die Türrahmen nicht beschädigt werden.

Die Abwinkelung der Seitenpaneelenkanten ist unterschiedlich. An einer Seite kleinwinkelig, auf der anderen Seite grosswinkelig. Die kleinwinkelligen Seitenpaneel werden an die Tür angeklebt. Noch bevor dem Abbinden des angebrachten Klebers überprüfen Sie die Passgenauigkeit der Türbaugruppe zur Öffnung in der Vorderwand (102-1). Bei vorliegender Passgenauigkeit kleben Sie endgültig die Baugruppe zusammen.

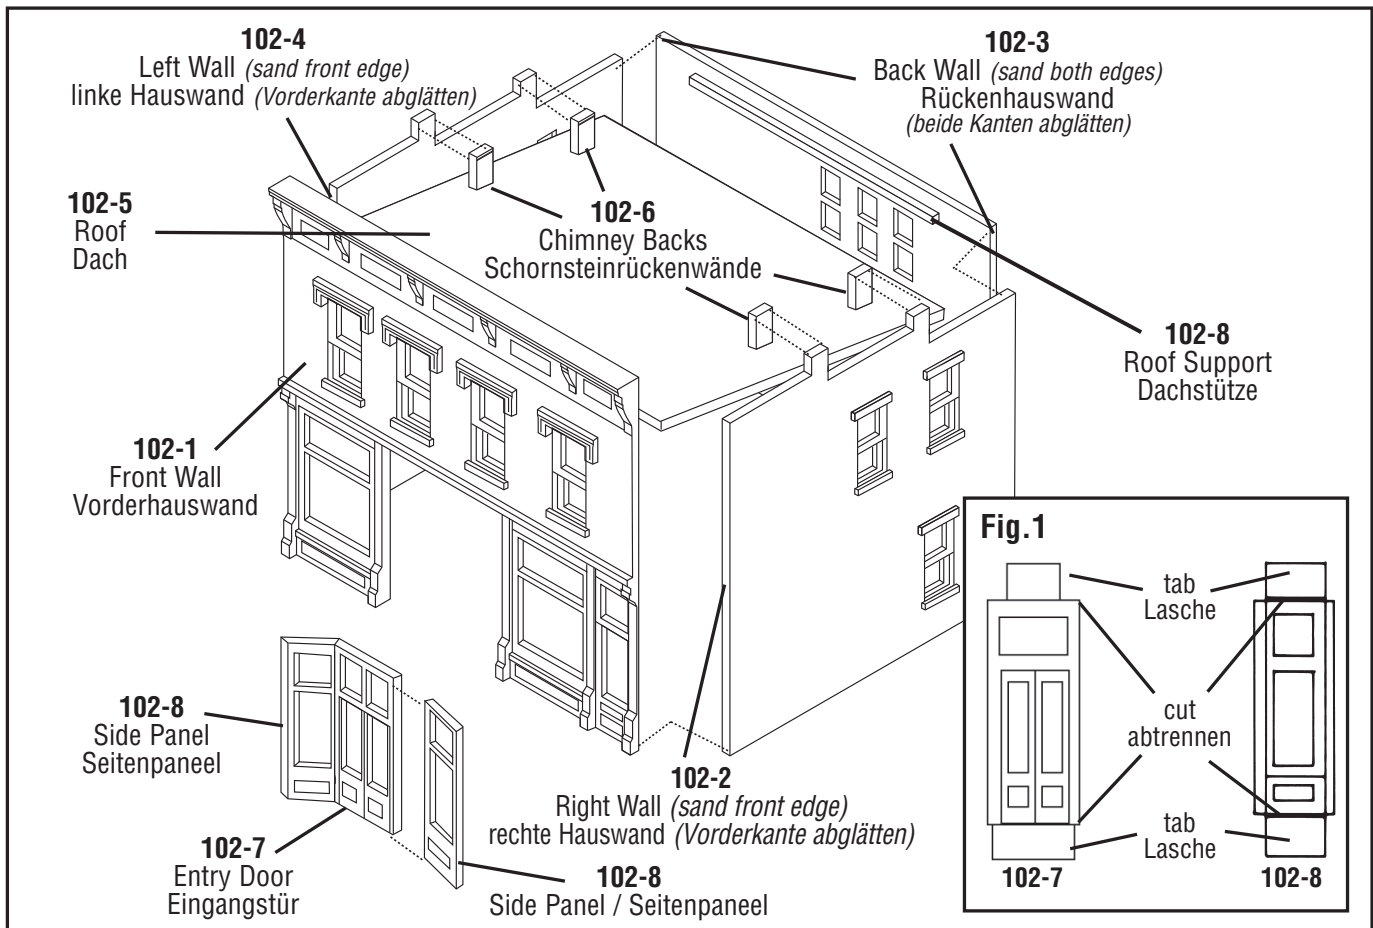

Create interest on your layout. Add lights to your buildings quickly and easily using the Woodland Scenics® Just Plug® Lighting System. Bereichern Sie Ihre Anlage: Mit dem Woodland Scenics Just Plug Beleuchtungssystem lassen sich Gebäude schnell und einfach beleben.

**CAUTION:** Cutting tools recommended. Use with care. / **ACHTUNG:** Schneidwerkzeuge empfohlen. Mit Vorsicht benutzen.

**MODELING AND CARE INFORMATION** This kit suggests the use of materials that may stain or cause damage. Take care to cover project area and clothing appropriately. Follow recommendations for use and cleanup.

Model making product. Not a toy! Not suitable for children under 14 years! / **Produit pour le modélisme.** Pas un jouet! Pas adapté aux enfants de moins de 14 ans! / **Producto para modelismo.** No es un juguete! No adecuado para niños menores de 14 años! / **Modellbauartikel.** Kein Spielzeug! Nicht geeignet für Kinder unter 14!