

ROOMETTES

ATLAS TAXI & DELIVERY #01-112-01 AND COMBO R4376

INSTRUCTIONS

1. REMOVE THE GARAGE, AS WELL AS THE OFFICE DESK TOP & BASE, AND VENDING MACHINE, FROM THE CARDSTOCK SHEETS WITH A SHARP HOBBY KNIFE. **DO NOT CUT THE DOTTED LINES.** THEY ARE FOR FOLDING.
2. FOLD THE BASE OF THE OFFICE DESK TO CREATE A THREE-SIDED BOX WITH 90-DEGREE TABS INSIDE AT THE TOP. **DO NOT OVERBEND THEM!** PLACE THE DESK TOP UPSIDE DOWN AND GLUE THE TABS OF THE BASE TO IT. PLACE A FILLET OF ADDITIONAL GLUE IN THE INSIDE CORNERS. SET IT ASIDE TO DRY.
3. FOLD THE VENDING MACHINE TO CREATE A THREE-SIDED BOX WITH 90-DEGREE TABS INSIDE AT THE TOP. APPLY GLUE TO THE TABS AND FOLD THE TOP OF THE MACHINE ONTO THEM. TURN THE VENDING MACHINE OVER AND USE YOUR KNIFE TO NUDGE THE TABS TO MAKE THE SIDES SQUARE, AND THEN APPLY PRESSURE AS THE GLUE SETS.
4. TEMPORARILY FOLD THE WALLS OF THE GARAGE TOGETHER TO GET A SENSE OF WHERE THE VENDING MACHINE WILL SIT IN THE SPACE. REFER TO THE ABOVE ILLUSTRATION AS A GUIDE FOR PLACEMENT. USE YOUR KNIFE TO ROUGHEN THE SURFACE OF THE FLOOR BEHIND THE MACHINE FOR IMPROVED ADHESION. GLUE IT IN PLACE, BEING GENEROUS WITH ADHESIVE BEHIND IT. YOU DO NOT WANT IT TO COME LOOSE LATER!
5. FOLD THE ROOM TOGETHER AND GLUE THE LEFT AND RIGHT WINGS UNDER THE FLOOR. USE A POPSICLE STICK OR SIMILAR TOOL TO CAREFULLY APPLY PRESSURE ON THE FLOOR OVER EACH WING TO SET THE GLUE.
6. FLIP THE ROOM OVER AND GLUE THE LEFT AND RIGHT WINGS OVER THE TOP OF THE CEILING.
7. CAREFULLY BEND OUT THE TAB LABELLED "GLUE TO WALL" AT A RIGHT ANGLE.
8. ASSEMBLE THE OTHER ROOMS IN A SIMILAR MANNER. ADD THE DESK TO THE UPPER OFFICE USING THE SAME TECHNIQUE AS THE VENDING MACHINE.
9. CHECK ALL GLUE JOINTS TO MAKE SURE THEY ARE SOLID BEFORE PROCEEDING. TEST FIT THE ROOMS. IF YOU HAVE ASSEMBLED YOUR BUILDING ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS THEY SHOULD FIT EASILY. IF YOU FIND THAT THEY FIT TOO TIGHT VERTICALLY YOU CAN REMOVE SOME OF THE WALL-MOUNT TAB MATERIAL WITH SCISSORS FOR ADDITIONAL CLEARANCE.
10. TO PREVENT LIGHT LEAKAGE, SPREAD A BIT OF GLUE INTO THE PERFORATED SEAMS ON THE CORNERS OF THE ROOM FROM THE OUTSIDE. THIS WILL ALSO MAKE THE JOINTS STRONGER.
11. USE YOUR KNIFE TO REMOVE THE CEILING PLUGS AND INSTALL PROVIDED LEDS, FASTENING THEM IN PLACE WITH GOOD QUALITY TAPE OR GLUE.
12. GLUE THE ROOMS TO THE WALLS, BEING CAREFUL NOT TO GET GLUE ON YOUR CLEAR WINDOW MATERIAL.
13. ADD EXTERIOR SIGNS TO THE BUILDING AS DESIRED.
14. PLUG THE LED HARNESS INTO YOUR WOODLAND SCENICS® JUST PLUG® OR NCE ILLUMINATOR MODULE. DIM THE LEDS, SIT BACK AND ENJOY YOUR EFFORTS!

THIS IS NOT A TOY.
NOT SUITABLE FOR CHILDREN
UNDER 14 YEARS OF AGE.

DPM® LANDMARK STRUCTURES® HO SCALE BUILDING KIT



CITY CAB CO. #11200

INSTRUCTIONS

Follow the enclosed HO scale General Instructions for #100 and #200 series kits. The General Instructions will refer to the drawings and instructions included with this kit. Read through all instructions before beginning construction on your kit.

Chimney: Sand bottom edge of Chimney Back (112-11) flat. Sand smooth side of Chimney Backs and molded-in Chimney fronts so they fit flush together. Glue together and let dry. When dry, sand top of Chimney flat.


Walls: Glue the four two-story Walls (112-1, 112-2, 112-3, 112-4) together. Then, glue the four one-story Walls (112-5, 112-6, 112-7, 112-8) together. Side Wall (112-8) will touch the sill on Back Wall (112-3). Cut off part of the sill so Walls fit flush. Glue the two Assemblies together as shown.

ANWEISUNGEN

Folgen Sie der beigefügten allgemeinen Bauanweisungen für HO-Bausätze der Serie #100 sowie #200. Diese allgemeine Bauanweisungen bezieht sich sowohl auf die Montagezeichnung sowie auf die Montageanweisungen, die dem Bausatz beiliegt. Lesen Sie bitte sorgfältig alle zugehörigen Anweisungen vor dem Zusammenbau Ihres Bausatzes gut durch.

Schornsteinrückwand: Glätten Sie mit Schmiergelpapier die Unterseite der Schornsteinrückwand (112-11) ab. Glätten Sie ebenfalls die ebenen (glatten) Seitenteile der Schornsteinrückwand sowie der eingegossenen Schornsteinvorderseiten ab damit sie bündig zusammenpassen. Zusammenkleben und Abbinden lassen. Nach dem Abbinden glätten Sie die Oberkante der Schornsteine ab.

Wände: Kleben Sie die vier zweistöckigen Wände (112-1, 112-2, 112-3, 112-4) zusammen. Kleben Sie dann die vier einstöckigen Wände (112-5, 112-6, 112-7, 112-8) zusammen. Die Seitenwand (112-8) berührt die Fensterbank an der Rückwand (112-3). Schneiden Sie einen Teil der Fensterbank ab, damit die Wände bündig sind. Kleben Sie die beiden Baugruppen wie gezeigt zusammen.

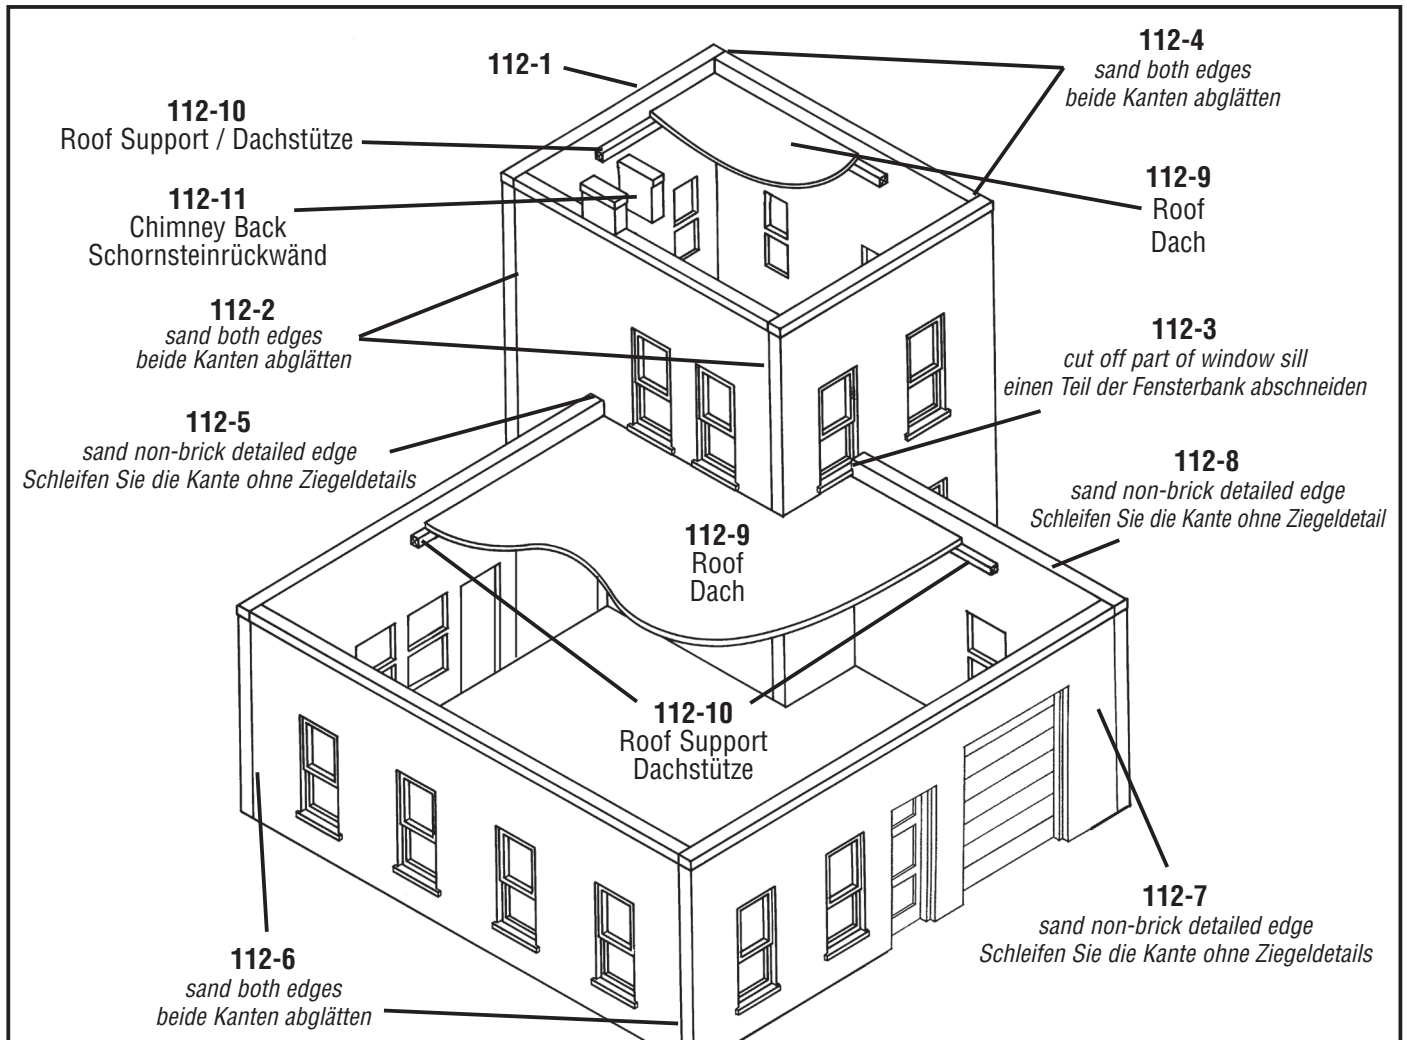

Create interest on your layout. Add lights to your buildings quickly and easily using the Woodland Scenics® Just Plug® Lighting System. Bereichern Sie Ihre Anlage: Mit dem Woodland Scenics Just Plug Beleuchtungssystem lassen sich Gebäude schnell und einfach beleben.

CAUTION: Cutting tools recommended. Use with care. / **ACHTUNG:** Schneidwerkzeuge empfohlen. Mit Vorsicht benutzen.

MODELING AND CARE INFORMATION This kit suggests the use of materials that may stain or cause damage. Take care to cover project area and clothing appropriately. Follow recommendations for use and cleanup.

Model making product. Not a toy! Not suitable for children under 14 years! / Produit pour le modélisme. Pas un jouet! Pas adapté aux enfants de moins de 14 ans! / Producto para modelismo. No es un juguete! No adecuado para niños menores de 14 años! / Modellbauartikel. Kein Spielzeug! Nicht geeignet für Kinder unter 14!