

ROOMETTES

ASHBY AUTO PARTS #01-116-01 AND COMBO R4378

INSTRUCTIONS

1. REMOVE THE MAIN FLOOR, AS WELL AS THE SERVICE COUNTER TOP & BASE, AND FLOOR DISPLAYS, FROM THE CARDSTOCK SHEETS WITH A SHARP HOBBY KNIFE. **DO NOT CUT THE DOTTED LINES.** THEY ARE FOR FOLDING.
2. FOLD THE BASE OF THE SERVICE COUNTER TO CREATE A THREE-SIDED BOX WITH 90-DEGREE TABS INSIDE AT THE TOP. **DO NOT OVERBEND THEM!**
3. PLACE THE COUNTER TOP UPSIDE DOWN AND GLUE THE TABS OF THE BASE TO IT. PLACE A FILLET OF ADDITIONAL GLUE IN THE INSIDE CORNERS. SET IT ASIDE TO DRY.
4. CREATE WINDOW SHELVES BY ROLLING THE TABS AT THE FRONT OF THE ROOM TO MAKE A BOX, AS SHOWN IN THE PHOTO TO THE LEFT. GLUE OTHER SIDE AS INDICATED ON THE TABS. A SMALL FILE OR SCREWDRIVER CAN BE USED TO APPLY PRESSURE TO THE JOINT FROM INSIDE THE BOX AS THE GLUE SETS.
5. FOLD THE WALLS OF THE ROOM TO GET A SENSE OF WHERE THE COUNTER AND DISPLAYS WILL SIT IN THE SPACE. USE YOUR KNIFE TO ROUGHEN THE SURFACE OF THE FLOOR BEHIND THE COUNTER FOR IMPROVED ADHESION. GLUE THE COUNTER IN PLACE, BEING GENEROUS WITH ADHESIVE BEHIND IT. YOU DO NOT WANT IT TO COME LOOSE LATER! ADD THE TWO STORE DISPLAYS ON THE SHOWROOM FLOOR. TIP: GLUE TRIANGULAR CARDSTOCK GUSSETS BEHIND THE STORE DISPLAYS TO PREVENT THEM FROM FALLING BACKWARDS.
6. FOLD THE ROOM TOGETHER AND GLUE THE LEFT AND RIGHT WINGS UNDER THE FLOOR. USE A POPSICLE STICK OR SIMILAR TOOL TO CAREFULLY APPLY PRESSURE ON THE FLOOR OVER EACH WING TO SET THE GLUE.
7. FLIP THE ROOM OVER AND GLUE THE LEFT AND RIGHT WINGS OVER THE TOP OF THE CEILING.
8. CAREFULLY BEND UP THE TAB LABELLED "GLUE TO WALL" AT A RIGHT ANGLE.
9. GLUE THE SIGNS SECURELY ON THE WINDOW SHELVES, POSITIONED AS DESIRED.
10. ASSEMBLE THE SECOND-FLOOR ROOMS IN A SIMILAR MANNER.
11. FOLD THE ROOM DIVIDERS AND GLUE THEM INTO THE SECOND FLOOR TO CREATE THREE SEPARATE OFFICES.
12. CHECK ALL GLUE JOINTS TO MAKE SURE THEY ARE SOLID BEFORE PROCEEDING. TEST FIT THE ROOMS. IF YOU HAVE ASSEMBLED YOUR BUILDING ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS THEY SHOULD FIT EASILY. IF YOU FIND THEY FIT TOO TIGHT VERTICALLY YOU CAN REMOVE SOME OF THE WALL-MOUNT TAB MATERIAL WITH SCISSORS FOR ADDITIONAL CLEARANCE.
13. TO PREVENT LIGHT LEAKAGE, SPREAD A BIT OF GLUE INTO THE PERFORATED SEAMS ON THE CORNERS OF THE ROOM FROM THE OUTSIDE. THIS WILL ALSO MAKE THE JOINTS STRONGER.
14. USE YOUR KNIFE TO REMOVE THE CEILING PLUGS AND INSTALL THE PROVIDED LEDS, FASTENING THEM IN PLACE WITH GOOD QUALITY TAPE OR GLUE. TIP: A SMALL DOT OF HOT GLUE ON THE CORNERS OF THE LED CIRCUIT BOARD WILL HELP TO KEEP IT IN PLACE ON THE CEILING.
15. GLUE THE ROOMS TO THE WALLS, BEING CAREFUL NOT TO GET GLUE ON YOUR CLEAR WINDOW MATERIAL.
16. GLUE THE SIGN ONTO THE FRONT OF THE BUILDING.
17. PLUG THE LEDS INTO YOUR WOODLAND SCENICS® JUST PLUG® HUB, MODEL TRAIN TECHNOLOGY LSCII CONTROLLER, OR NCE ILLUMINATOR MODULE. DIM THE LEDS, SIT BACK AND ENJOY YOUR EFFORTS!

THIS IS NOT A TOY.
NOT SUITABLE FOR CHILDREN
UNDER 14 YEARS OF AGE.

DPM® LANDMARK STRUCTURES® HO SCALE BUILDING KIT



CARR'S PARTS #11600

INSTRUCTIONS

Follow the enclosed HO scale General Instructions for #100 and #200 series kits. The General Instructions will refer to the drawings and instructions included with this kit. Read through all instructions before beginning construction on your kit.

Chimney: Sand the smooth side of Chimney Halves (116-6) until they fit flush, then glue together. When dry, sand or file top and bottom until flat. Glue Chimney to top of Roof after Roof installation.


Entry Door: Remove "tabs" from top and bottom of Entry Door (116-7). Score along indentations with a hobby knife, then snap off (**Fig. 1**). Sand lightly to remove rough edges. Be careful not to damage the door frames. See General Instructions for Entry Door assembly instructions.

ANWEISUNGEN

Folgen Sie der beigefügten allgemeinen Bauanweisungen für HO-Bausätze der Serie #100 sowie #200. Diese allgemeine Bauanweisungen bezieht sich sowohl auf die Montagezeichnung sowie auf die Montageanweisungen, die dem Bausatz beiliegt. Lesen Sie bitte sorgfältig alle zugehörigen Anweisungen vor dem Zusammenbau Ihres Bausatzes gut durch.

Schornstein: Die glatte Seite der Schornsteinhälften (116-6) schleifen, bis sie bündig sind, und dann zusammenkleben. Wenn der Kleber trocken ist, schleifen oder feilen Sie den oberen und unteren Teil des Schornsteins flach. Kleben Sie den Schornstein nach der Dachmontage auf das Dach.

Eingangstür: Die angegossenen Laschen an der Tür (116-7) oben sowie unten (**Fig. 1**) so entfernen: Mit dem Bastelmesser an den Rillen entlangfahren und abbrechen. Leicht schleifen, um raue Kanten zu entfernen. Achten Sie dabei darauf, dass die Türrahmen nicht beschädigt werden. Siehe Allgemeine Anweisungen zur Montage der Eingangstür.

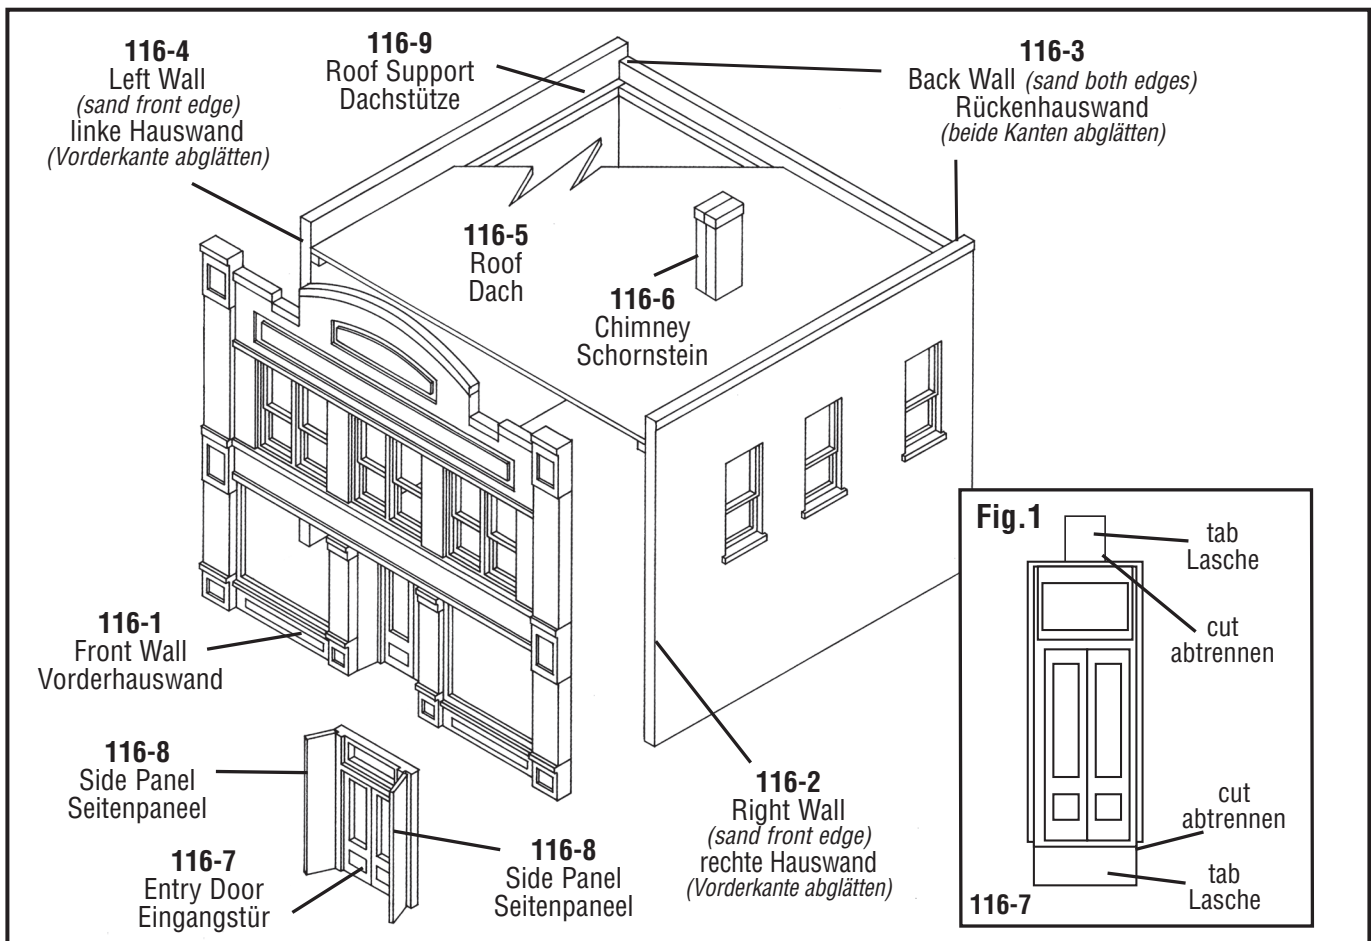

Create interest on your layout. Add lights to your buildings quickly and easily using the Woodland Scenics® Just Plug® Lighting System. Bereichern Sie Ihre Anlage: Mit dem Woodland Scenics Just Plug Beleuchtungssystem lassen sich Gebäude schnell und einfach beleben.

CAUTION: Cutting tools recommended. Use with care. / **ACHTUNG:** Schneidwerkzeuge empfohlen. Mit Vorsicht benutzen.

MODELING AND CARE INFORMATION This kit suggests the use of materials that may stain or cause damage. Take care to cover project area and clothing appropriately. Follow recommendations for use and cleanup.

Model making product. Not a toy! Not suitable for children under 14 years! / Produit pour le modélisme. Pas un jouet! Pas adapté aux enfants de moins de 14 ans! / Producto para modelismo. No es un juguete! No adecuado para niños menores de 14 años! / Modellbauartikel. Kein Spielzeug! Nicht geeignet für Kinder unter 14!