## ROOMETTES

## ARLINGTON HOTEL #01-119-01 AND COMBO R4381

### INSTRUCTIONS

- I. REMOVE THE MAIN FLOOR LOBBY, AS WELL AS THE FRONT DESK TOP AND BASE, FROM THE CARDSTOCK SHEETS WITH A SHARP HOBBY KNIFE.

  PO NOT CUT THE POTTEP LINES. THEY ARE FOR FOLDING.
- 2. FOLD THE BASE OF THE FRONT DESK TO CREATE A THREE-SIDED BOX WITH 90-DEGREE TABS INSIDE AT THE TOP. **PO NOT OVERBEND THEM!**
- 3. PLACE THE COUNTER TOP UPSIDE-POWN AND GLUE THE TABS OF THE BASE TO IT. ADD A FILLET OF ADDITIONAL GLUE IN THE INSIDE CORNERS, SET IT ASIDE TO DRY.
- 4. FOLD THE WALLS OF THE ROOM TO GET A SENSE OF WHERE THE COUNTER WILL SIT IN THE SPACE. USE YOUR KNIFE TO ROUGHEN THE SURFACE OF THE FLOOR BEHIND THE COUNTER FOR IMPROVED ADHESION. GLUE THE COUNTER IN PLACE, BEING GENEROUS WITH ADHESIVE BEHIND IT. YOU DO NOT WANT IT TO COME LOOSE LATER!
- 5. FOLD THE LOBBY TOGETHER AND GLUE THE LEFT AND RIGHT WINGS UNDER THE FLOOR. USE A POPSICLE STICK OR SIMILAR TOOL TO CAREFULLY APPLY PRESSURE ON THE FLOOR OVER EACH WING TO SET THE GLUE.
- 6. FLIP THE ROOM OVER AND GLUE THE RIGHT WING OVER THE TOP OF THE CEILING.
- 7. CAREFULLY BEND UP THE TABS LABELLED "GLUE TO WALL" AT A RIGHT ANGLE.
- 8. BEND THE TWO RED SHORT WALLS UP. IF YOU BEND THEM JUST SHORT OF 90-DEGREES THEY WILL NATURALLY APPLY PRESSURE TO THE WALL WHEN THEY ARE INSTALLED, MAKING GLUING EASIER.
- 9. GLUE THE REMAINING SMALL TAB AND WRAP IT AROUND THE SIDEWALL. SET THE LOBBY ASIDE TO DRY.
- 10. ASSEMBLE THE LIQUOR STORE WITH ITS COUNTER IN A SIMILAR MANNER. GLUE THE STORE SHELVES TO THE FLOOR, POSITIONING AS DESIRED.
  - TIP: CUT OUT A SMALL TRIANGLE OF SCRAP CARDBOARD AND GLUE IT BEHIND EACH STORE SHELF TO PROVIDE ADDITIONAL BRACING.
- II. CHECK ALL GLUE JOINTS TO MAKE SURE THEY ARE SOLID BEFORE PROCEEDING. TEST FIT THE TWO ROOMS. IF YOU HAVE ASSEMBLED YOUR BUILDING ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS THEY SHOULD FIT EASILY.
- 12. TO PREVENT LIGHT LEAKAGE, SPREAD A BIT OF GLUE INTO THE PERFORATED SEAMS ON THE CORNERS OF THE ROOM FROM THE OUTSIDE. THIS WILL ALSO MAKE THE JOINTS STRONGER. ALLOW THE GLUE TO DRY BEFORE MOVING TO STEP 13.
- 13. LISE YOUR KNIFE TO REMOVE THE CEILING PLUGS AND INSTALL THE PROVIDED LEDS, FASTENING THEM IN PLACE WITH GOOD QUALITY TAPE OR GLUE.
  - TIP: A SMALL POT OF HOT GLUE ON THE CORNERS OF THE LEP CIRCUIT BOARD WILL HELP TO KEEP IT IN PLACE ON THE CEILING.
- 14. STARTING WITH THE HOTEL LOBBY FIRST, GLUE THE ROOMS TO THE WALLS. BE CAREFUL NOT TO GET GLUE ON YOUR CLEAR WINDOW MATERIAL.
- IS. ASSEMBLE AND INSTALL THE ROOMS FOR THE UPPER FLOORS. MOST OF THE UPPER FLOOR ROOMS CAN BE LISED IN SEVERAL LOCATIONS. LOCATE THEM TO GIVE THE BEST EFFECT. IF YOU FIND THERE IS TOO MUCH WALL-MOUNT TAB MATERIAL ON SOME ROOMS YOU CAN TRIM THEM WITH SCISSORS FOR ADDITIONAL CLEARANCE.
- IG. PLUG THE LEPS INTO YOUR WOODLAND SCENICS' JUST PLUG' HUB, MODEL TRAIN TECHNOLOGY LSCII CONTROLLER, OR NCE ILLUMINATOR MODULE. PIM THE LEPS, SIT BACK AND ENJOY YOUR EFFORTS!

THIS IS NOT A TOY.

NOT SUITABLE FOR CHILDREN

UNDER 14 YEARS OF AGE.

# DPM® LANDMARK STRUCTURES® HO SCALE BUILDING KIT



## **M.T. ARMS HOTEL #11900**

### INSTRUCTIONS

Follow the enclosed HO scale General Instructions for #100 and #200 series kits. The General Instructions will refer to the drawings and instructions included with this kit. Read through all instructions before beginning construction on your kit.

Chimney: Sand smooth side of Chimney Halves x2 (119-6) until they fit flush, then glue together. When dry, sand or file top and bottom until flat. Glue Chimney to top of Roof after installation.


Entry Doors: To assemble Entry Doors (119-8) with Side Panel Material (119-7), see Entry Doors section in General Instructions.

### **ANWEISUNGEN**

Folgen Sie der beigefügten allgemeinen Bauanweisungen für H0-Bausätze der Serie #100 sowie #200. Diese allgemeine Bauanweisungen bezieht sich sowohl auf die Montagezeichnung sowie auf die Montageanweisungen, die dem Bausatz beiliegt. Lesen Sie bitte sorgfältig alle zugehörigen Anweisungen vor dem Zusammenbau Ihres Bausatzes gut durch.

Schornstein: Die glatte Seite der Schornsteinhälften (119-6) schleifen, bis sie bündig sind, und dann zusammenkleben. Wenn der Kleber trocken ist, schleifen oder feilen Sie den oberen und unteren Teil des Schornsteins flach. Kleben Sie den Schornstein nach der Dachmontage auf das Dach.

Eingangstüren: Informationen zum Zusammenbau der Eingangstüren (119-8) mit Seitenverkleidungsmaterial (119-7) finden Sie im Abschnitt Eingangstüren in den allgemeinen Anweisungen.

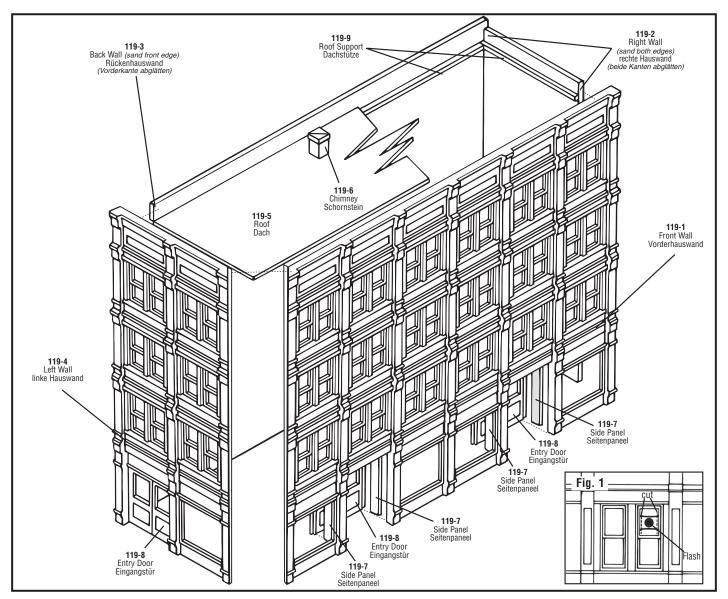

Create interest on your layout. Add lights to your buildings quickly and easily using the Woodland Scenics® Just Plug® Lighting System. Bereichern Sie Ihre Anlage: Mit dem Woodland Scenics Just Plug Beleuchtungssystem lassen sich Gebäude schnell und einfach beleben.



MODELING AND CARE INFORMATION This kit suggests the use of materials that may stain or cause damage. Take care to cover project area and clothing appropriately. Follow recommendations for use and cleanup.

Model making product. Not a toy! Not suitable for children under 14 years! / Produit pour le modélisme. Pas un jouet! Pas adapté aux enfants de moins de 14 ans! / Producto para modelismo. No es un juguete! No adecuado para niños menores de 14 años! / Modellbauartikel. Kein Spielzeug! Nicht geeigent für Kinder unter 14!