#107 Freight Depot Instructions

Please follow the HO scale general instructions for #100 and #200 Series Kits which are enclosed in this kit. You will be referred to the drawings and notes printed here. Please read through all instructions before beginning to build your kit.

Chimneys

Lightly sand bottom of chimney (107-11) retaining angle so that chimney sits straight when glued to roof.

Roof
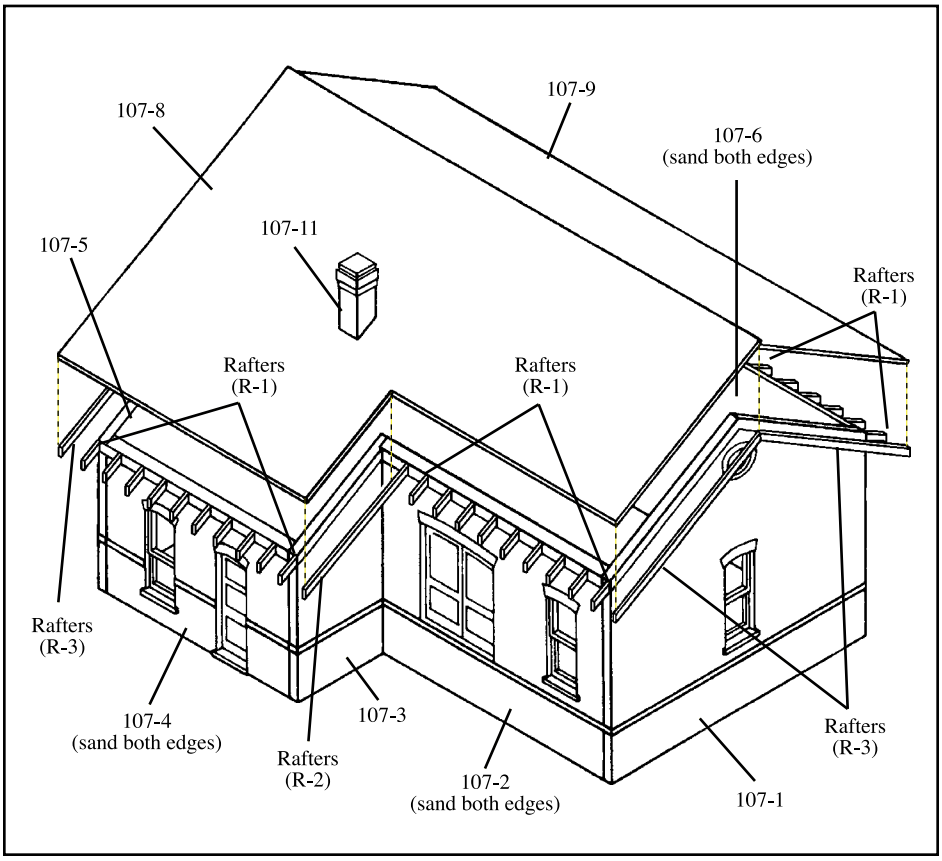
To assemble gable roof, see enclosed #107 Roof Assembly Instructions.