#115 The Other Corner Cafe Instructions

Please follow the HO scale general instructions for #100 and #200 Series Kits which are enclosed in this kit. You will be referred to the drawings and notes printed here. Please read through all instructions before beginning to build your kit.

Chimneys

Lightly sand bottom of chimney backs until flat (115-7). Sand or file the smooth sides of chimney backs and molded-in chimney fronts so backs and fronts fit tightly and are flush with each other. Glue together. When glue is dry, sand tops of chimneys flat.

Cornice
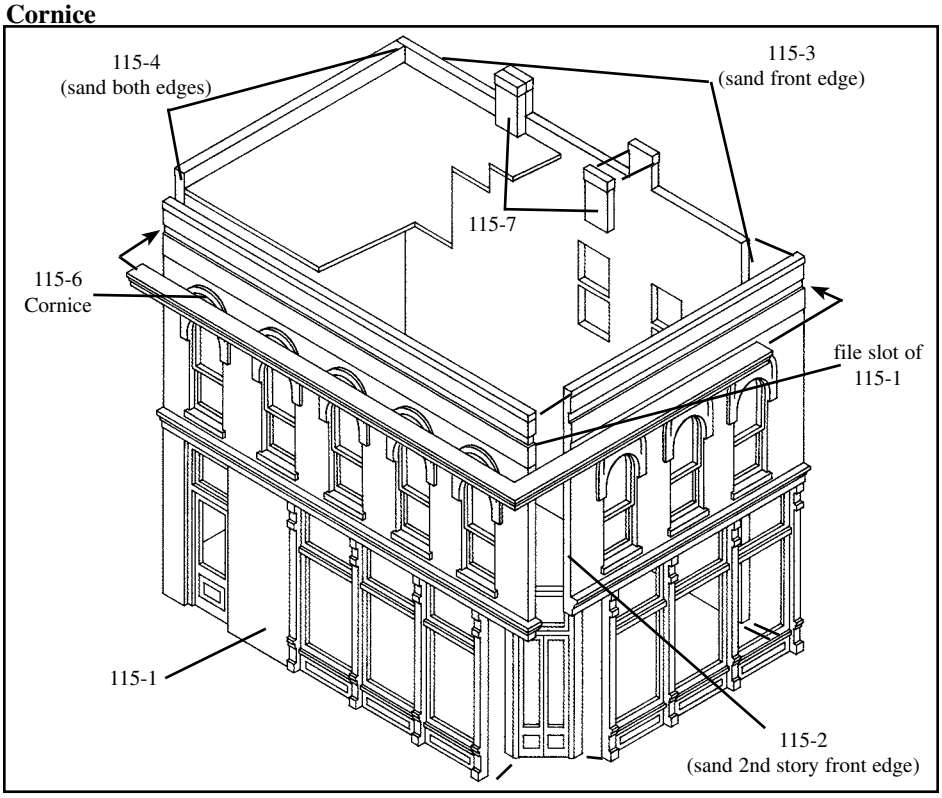
The cornice (115-6) fits into the slots located near the tops of walls 115-1 and 115-2. For the cornice to fit properly, the right edge of slot on 115-1 will have to be filed to match the left edge of slot on 115-2. Test fit to make sure brick courses line up and that the cornice fits properly. When satisfied with fit, glue walls together. Insert cornice and glue.